Full Step Installation

2E Printed 5 NOV 2012

ComposiGrip

The Safest Step You'll Ever Take

Mounting the Steps

Ten screws are supplied to fasten step to stringer

Wood

Steel

Five screws per mounting pad should be used to secure the step. The step can be used with many common stringer styles. Here are a few examples with recommended fastener patterns.

Aluminum

Required Tools

Drill/Driver

Tape measure

Bevel square

Safety glasses

3/8"Hex drive socket
With extension

Stringer Placement

Recommended Stringer span of 29" for 42" step to 35" for 48" step.
This will provide maximum strength and room to mount handrail posts.

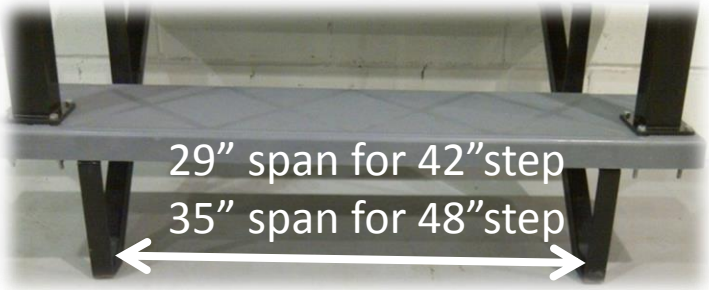

Materials Required

Self tapping Screws
(10 included with your step)
Stair Stringers (not included)

Comoldco Corporation
www.comoldco.com

Made in Canada